

NetComm NF10W Setup Guide






Contents

1	Reset router	1
2	Setup router	1
	Ethernet cable connection	
	WiFi connection	3
3	Login WIFI configuration page	3
4	Optional: Change your WiFi name and password	6



1 Reset router


- 1.1 Connect the router to power supply.
- 1.2 Press and hold this button for more than 10 seconds to reset the router to its factory default settings.

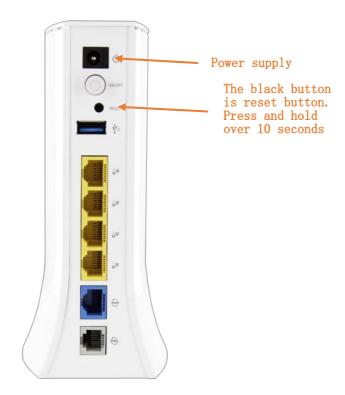

2 Setup router

2.1 Using an Ethernet cable to connect the WAN port.



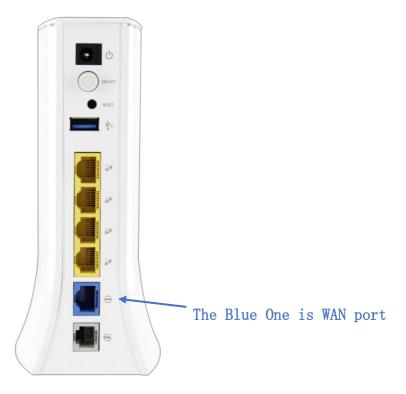


2.2 There are two methods to connect with your router:

Ethernet cable connection

2.3 Turn off the WiFi on your laptop/PC and connect laptop/PC with any of LAN ports (1 –4 of router) via Ethernet cable.



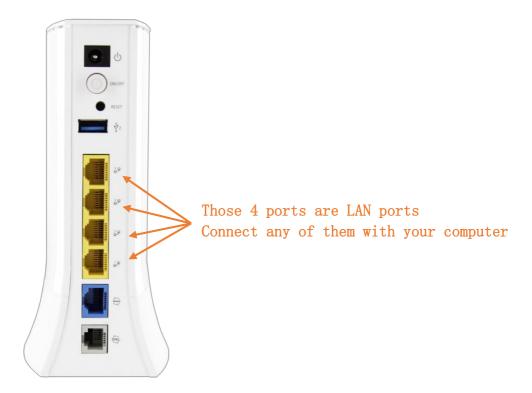

WiFi connection

You can use your laptop, tablet or phone to connect with router for setting through WiFi.

- 2.4 You can find the default SSID and wireless security key from Wireless Security Card.
- 2.5 Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

*Careful: Once your device connect with haven't configured router, your device will temporarily out of Internet. So please do not use the device which is currently using Internet.


3 Login WIFI configuration page




3.2 Click on the Basic Setup menu item on the left side of the screen



3.3 Select Ethernet WAN then click the Next button.

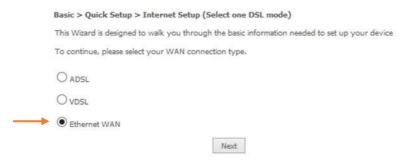

3.4 Choose connection type to PPPoE

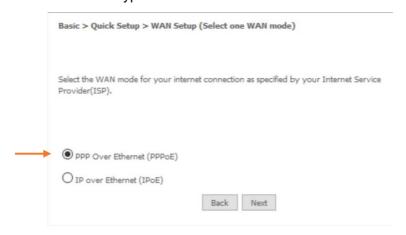


3.5 Input the PPPoE username and password provided by us, then click "Save". You can find these username and password in the Service Activation Notice Email. (Ensure the Connection Mode is Always on and please save other as default.)





 3.6 Choose Obtain an IP address automatically



3.7 The settings are displayed in a summary. Click Apply/Save to save them.



3.8 After a while, the third light of your router is solid green which means you can access the Internet now.





4 Optional: Change your WiFi name and password

NF18ACV

Device Info

Basic Setup

4.1 Change WiFi name:

Click Wireless 2.4GHz/5GHz -> Basic. You can enter your WiFi name in Wireless Network Name in this page. Click "Apply/Save" bottom after changing.

NF18ACV

Basic Setup

Advanced Setup




*Note: Because NL1901ACV is a dual band router, so it has 2 bands 2.4GHz and 5GHz. The settings in 2.4GHz and 5GHz are same.

Change WiFi Password/PIN: 4.2

Click Wireless 2.4GHz/5GHz -> Wireless Security. Remember, always select WPA/WPA2 - Personal. You can enter your WiFi password in Wireless Password in this page. Remember click "Apply/Save" bottom after changing.



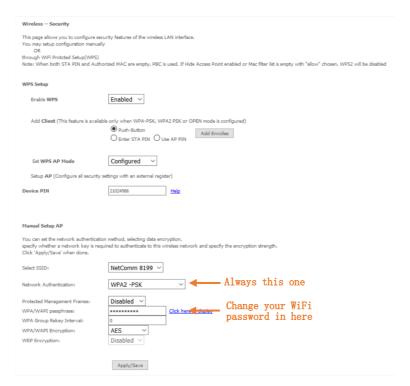

*Careful: Once you change your WiFi name or password, your device needs to reconnect with WiFi.