

NetComm NF18ACV Setup Guide




Contents

1	Reset router	1
2	Setup router	1
	Ethernet cable connection	
	WiFi connection	3
3	Login WIFI configuration page	3
4	Optional: Change your WiFi name and password	6

1 Reset router

- 1.1 Connect the router to power supply.
- 1.2 Press and hold this button for more than 10 seconds to reset the router to its factory default settings.

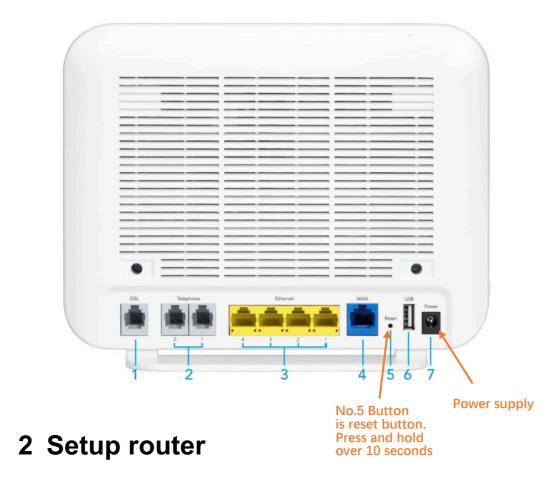


2.1 Using an Ethernet cable to connect the WAN port.



2.2 There are two methods to connect with your router:

Ethernet cable connection

2.3 Turn off the WiFi on your laptop/PC and connect laptop/PC with any of LAN ports (1 –4 of router) via Ethernet cable.

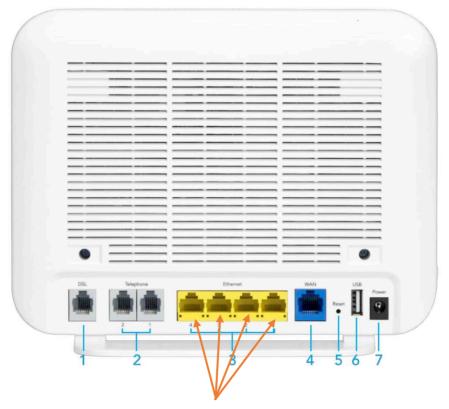

WiFi connection

No.3; those 4 ports are LAN ports Connect any of them with your computer

You can use your laptop, tablet or phone to connect with router for setting through WiFi.

- 2.4 You can find the default SSID and wireless security key at the bottom of router.
- 2.5 Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.


*Careful: Once your device connect with haven't configured router, your device will temporarily out of Internet. So please do not use the device which is currently using Internet.

3 Login WIFI configuration page


3.1 Open Internet browser (e.g. Google Chrome, Safari, etc.) and input http://192.168.1.1/ or http://192.168.0.1/ in the address bar to visit router's configuration page. The default username and password for this router is: admin (all Lowercase)



3.2 Skip to the main menu

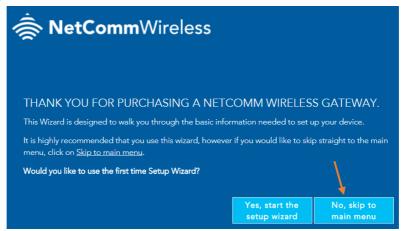

3.3 Once you login, on the sidebar, click Network -> WAN

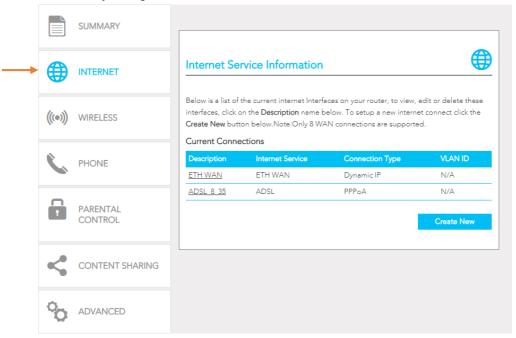


3.4 Click the name of existing Current Connections and Delete




3.5 After empty the Current Connection, click Create New

Create New

3.6 Choose Internet Service to Ethernet WAN and change connection Type to PPPoE

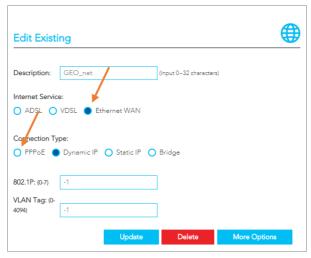

3.7 Input the PPPoE username and password provided by us, then click "Save". You can find these username and password in the Service Activation Notice Email. (Ensure the Connection Mode is Always on and please save other as default.)

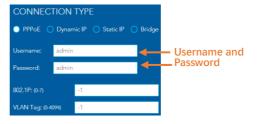


3.8 After a while, the third on the left light of your router is solid green which means you can access the Internet now.



4 Optional: Change your WiFi name and password

4.1 Change WiFi name & Password/PIN:

Click Wireless. You can enter your WiFi name in Wireless Name and Passwrod in this page. Click "Save" bottom after changing.

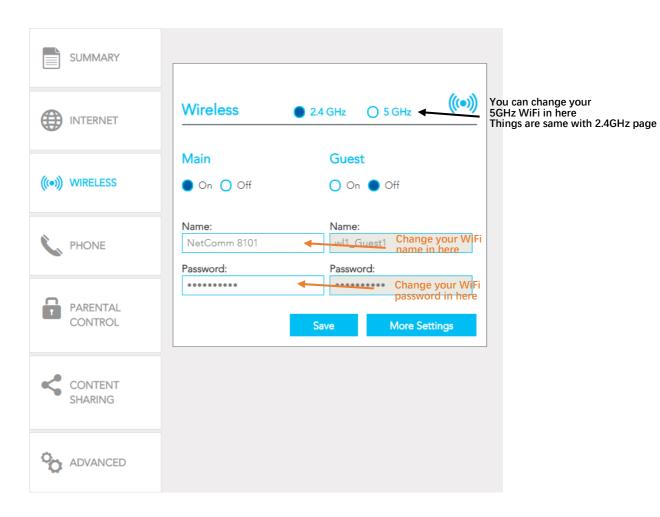

*Note: Because NF18ACV is a dual band router, so it has 2 bands 2.4GHz and 5GHz. The settings in 2.4GHz and 5GHz are same.

*Careful: Once you change your WiFi name or password, your device needs to reconnect with WiFi.