

TP-Link AX501 Setup Guide



Contents

1	Reset router	1
2	Setup router	1
	Ethernet cable connection	1
	WiFi connection.....	2
3	Login WIFI configuration page	3
4	Optional: Change your WiFi name and password/PIN.....	4

1 Reset router

- 1.1 Connect the router to power supply and turn on the router.
- 1.2 Press and hold this button for more than 10 seconds to reset the router to its factory default settings.



2 Setup router

- 2.1 Using an Ethernet cable to connect the WAN port.



- 2.2 There are two methods to connect with your router:

Ethernet cable connection

- 2.3 Turn off the WiFi on your laptop/PC and connect laptop/PC with any of LAN

ports (1 –4 of router) via Ethernet cable.



WiFi connection

You can use your laptop, tablet or phone to connect with router for setting through WiFi.

- 2.4 You can find the WiFi name and password/PIN at the back of router.




- 2.5 Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

***Careful:** Once your device connect with haven't configured router, your device will temporarily out of Internet. So please do not use the device which is currently using Internet.


3 Login WIFI configuration page

- 3.1 Open Internet browser (e.g. Google Chrome, Safari, etc.) and input <http://192.168.1.1/> or <http://192.168.0.1/> in the address bar to visit router's configuration page. Firstly, setup a password for the configuration page.

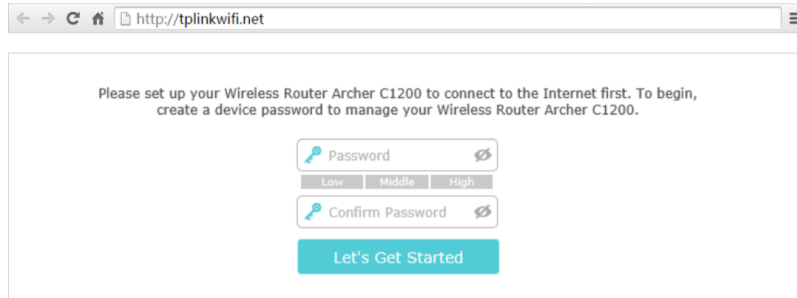


*** Careful:** *This is not the Password for your WiFi. This Password is only use for login configuration page, only the setup person know.*

- 3.2 Once you login, click Basic -> Internet

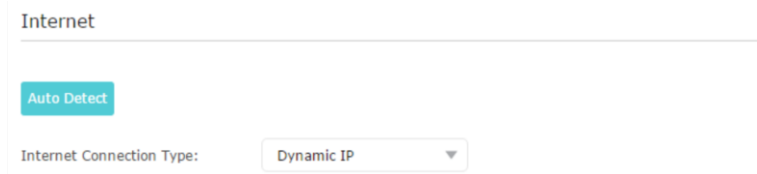

- 3.3 Change Internet Connection Type to PPPoE

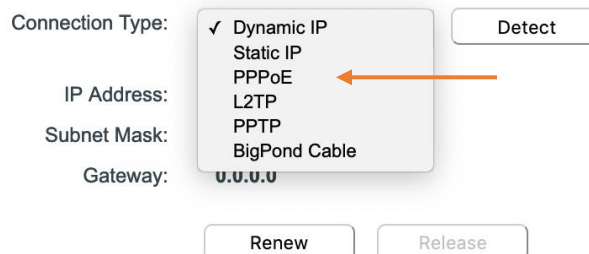

- 3.4 Input the PPPoE username and password provided by us, then click "Save". You can find these username and password in the Service Activation Notice Email. (Ensure the Connection Mode is Always on and please save other as default

Internet

Auto Detect

Internet Connection Type: PPPoE

Username:

Password:

Note: If you are not sure about which Internet Connection Type you have, use Auto Detect or contact your Internet Service Provider (ISP) for assistance.

Save

- 3.5 After a while, the middle light of your router is solid green which means you can access the Internet now.



4 Optional: Change your WiFi name and password/PIN

4.1 Change WiFi name:

Click Basic -> Wireless. You can enter your WiFi name in Wireless Network Name and Password in this page. Click "Save" bottom after changing.

Wireless Settings

2.4GHz Wireless Network: ☒ Enable

Wireless Network Name (SSID): ☐ Hide SSID ← Change your WiFi name in here

Password: ← Change your WiFi password in here

5GHz Wireless Network: ☒ Enable

Wireless Network Name (SSID): ☐ Hide SSID

Password:

***Note:** Because C1200 is a dual band router, so it has 2 bands 2.4GHz and 5GHz. The settings in 2.4GHz and 5GHz are same.

***Careful:** Once you change your WiFi name or password, your device needs to reconnect with WiFi.