

TP-Link C60 Setup Guide




Contents

1	Reset router	1
2	Setup router	1
	Ethernet cable connection	2
	WiFi connection.....	3
3	Login WIFI configuration page	3
4	Optional: Change your WiFi name and password/PIN.....	6


1 Reset router

- 1.1 Connect the router to power supply and turn on the router.
- 1.2 Press and hold this button for more than 10 seconds to reset the router to its factory default settings.

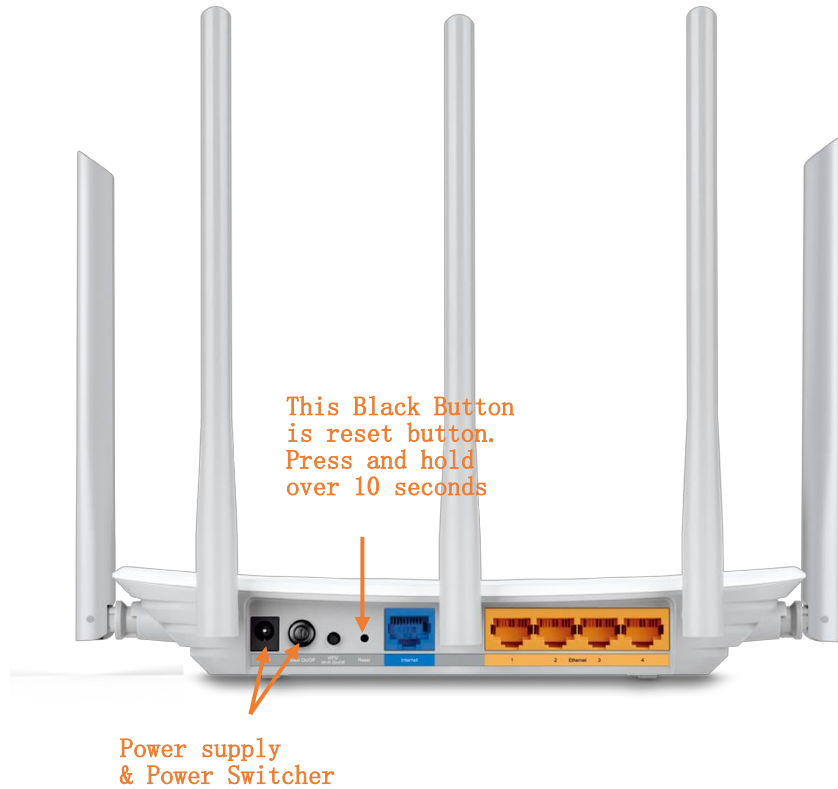

2 Setup router


- 2.1 Using an Ethernet cable to connect the Internet port.

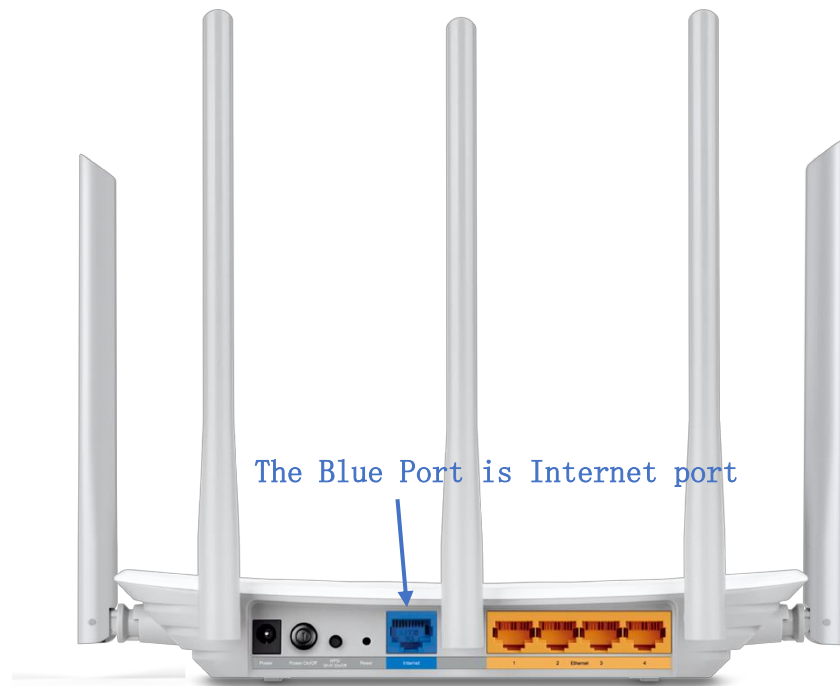

2.2 There are two methods to connect with your router:

Ethernet cable connection


2.3 Turn off the WiFi on your laptop/PC and connect laptop/PC with any of LAN ports (1 –4 of router) via Ethernet cable.

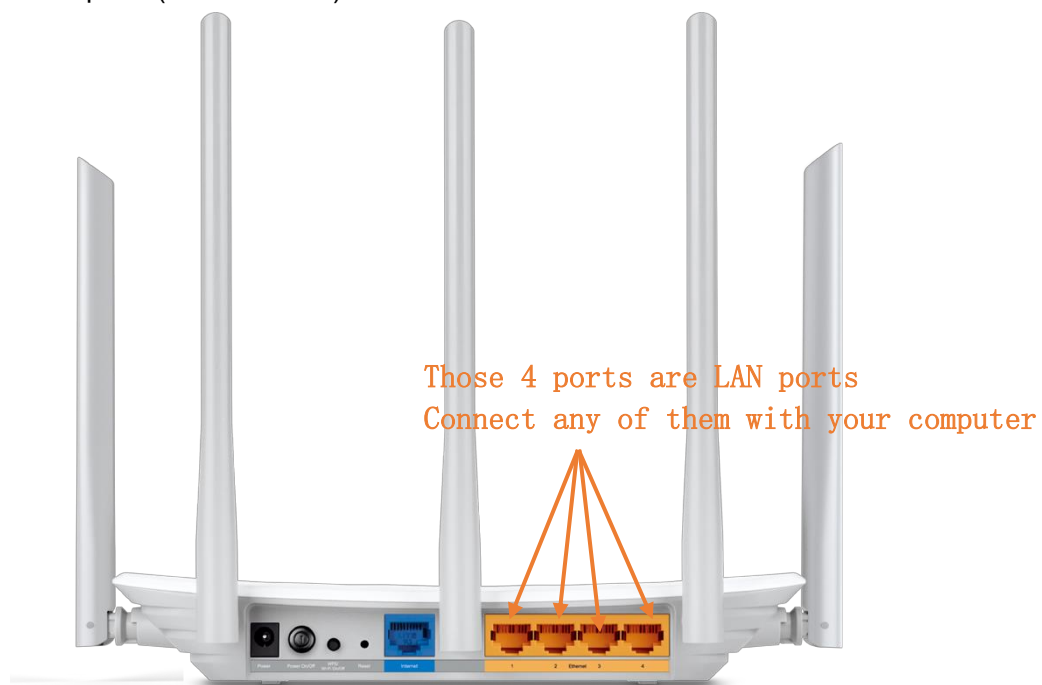

WiFi connection

You can use your laptop, tablet or phone to connect with router for setting through WiFi.

2.4 You can find the WiFi name and password/PIN at the back of router.

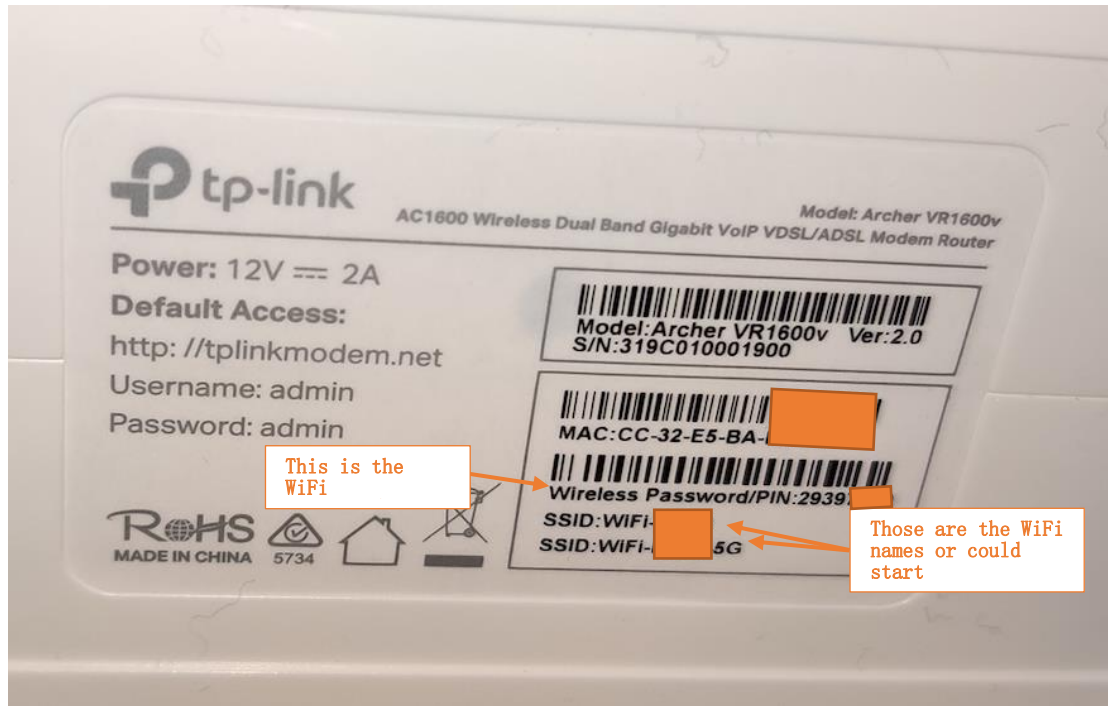


2.5 Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

***Careful:** Once your device connect with haven't configured router, your device will temporarily out of Internet. So please do not use the device which is currently using Internet.

3 Login WIFI configuration page

3.1 Open Internet browser (e.g. Google Chrome, Safari, etc.) and input <http://192.168.1.1/> or <http://192.168.0.1/> in the address bar to visit router's configuration page. Initially, you need to setup a password for the configuration page.

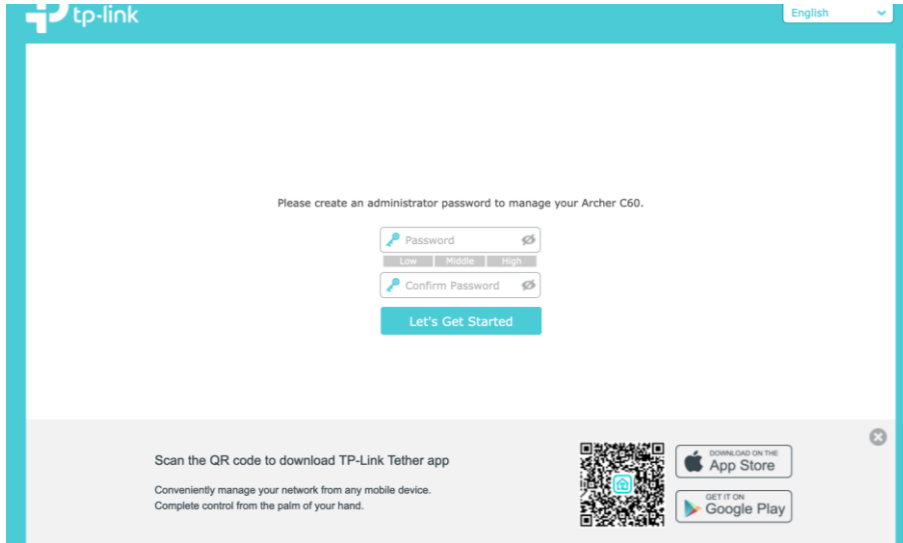

tp-link English

Please create an administrator password to manage your Archer C60.

Password


Low Middle High

Confirm Password

Let's Get Started

Scan the QR code to download TP-Link Tether app


Conveniently manage your network from any mobile device.
Complete control from the palm of your hand.



DOWNLOAD ON THE
App Store

GET IT ON
Google Play

3.2 Once you login, on the top, click Advanced

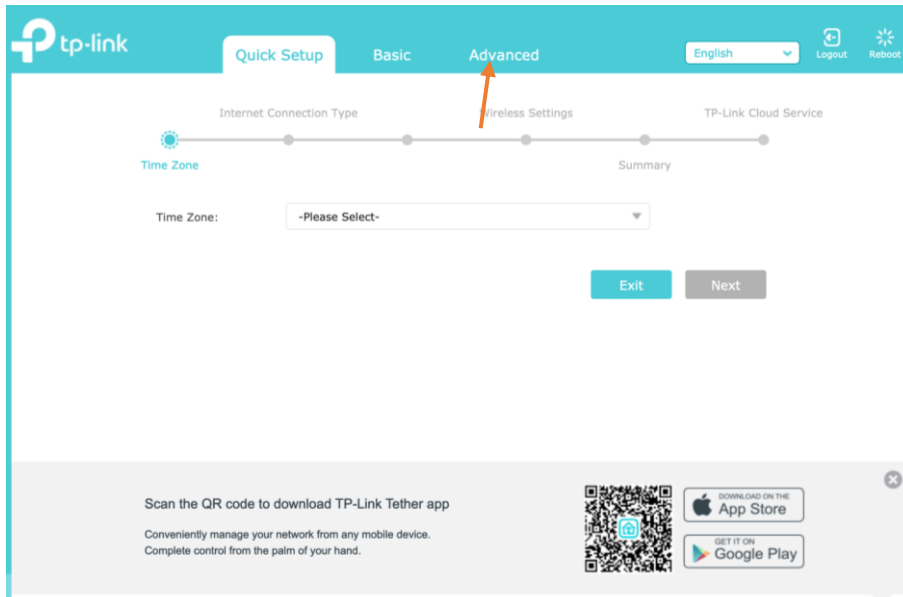

tp-link Quick Setup Basic Advanced English Logout Reboot

Internet Connection Type Wireless Settings TP-Link Cloud Service


Time Zone

Time Zone:

Exit Next

Scan the QR code to download TP-Link Tether app


Conveniently manage your network from any mobile device.
Complete control from the palm of your hand.




DOWNLOAD ON THE
App Store

GET IT ON
Google Play


3.3 Click Network

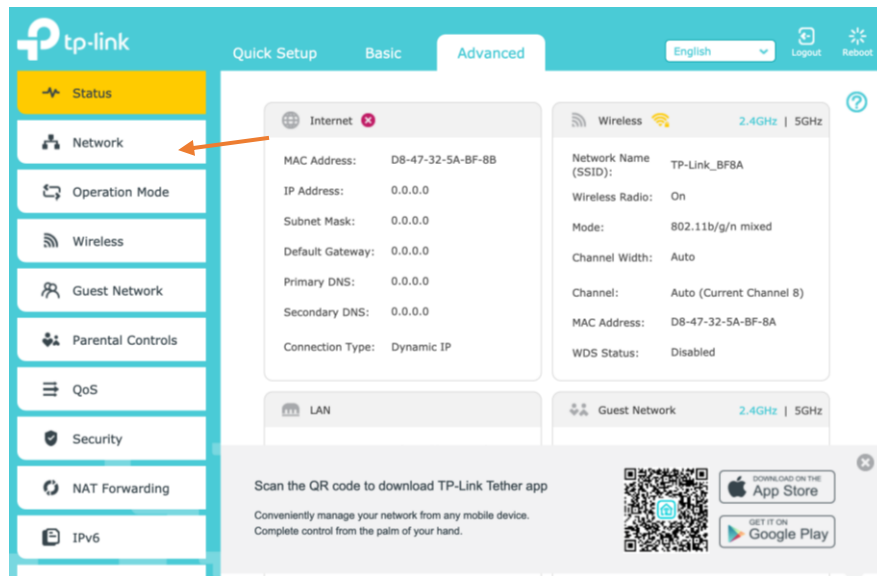


3.4 Click Internet in Network

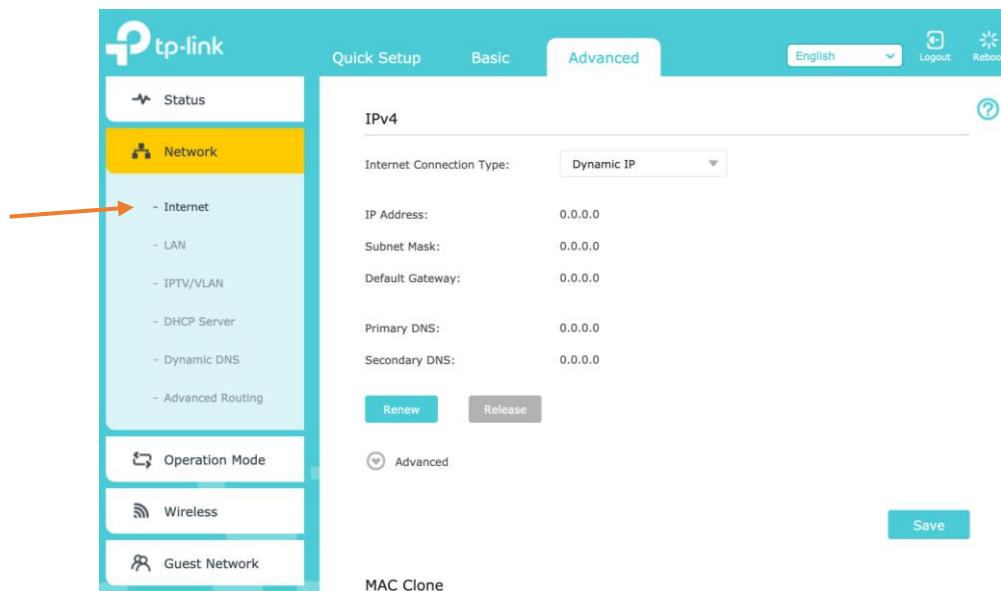

3.5 Change connection Internet Connection Type to PPPoE

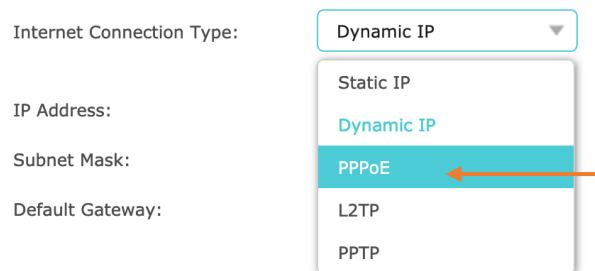

3.6 Input the PPPoE username and password provided by us, then click "Save". You can find these username and password in the Service Activation Notice Email. (Please save other as default.)

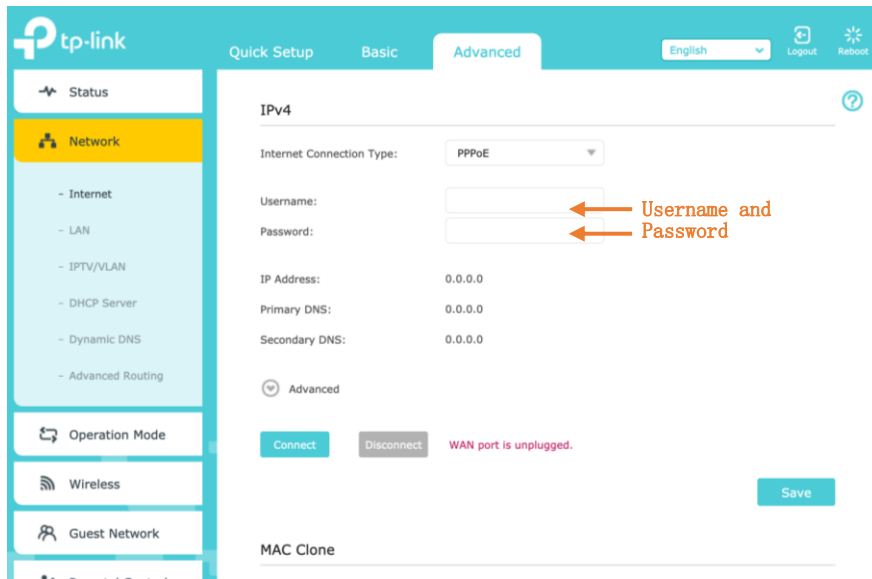

The screenshot shows the TP-Link web interface with the 'Advanced' tab selected. The 'IPv4' section is active, showing 'Internet Connection Type' set to 'PPPoE'. The 'Username' and 'Password' fields are highlighted with orange arrows and the text 'Username and Password'. Below these fields, the IP Address, Primary DNS, and Secondary DNS are all set to '0.0.0.0'. The 'Advanced' section is expanded, showing 'Connect', 'Disconnect', and a 'WAN port is unplugged' warning. A 'Save' button is at the bottom right.


- 3.7 After a while, the first on the right light of your router is solid green which means you can access the Internet now.



4 Optional: Change your WiFi name and password/PIN

4.1 Change WiFi name & Password/PIN:

Click Wireless 2.4GHz/5GHz -> Basic Settings. You can enter your WiFi name in Wireless Network Name in this page. Click "Save" bottom after changing.

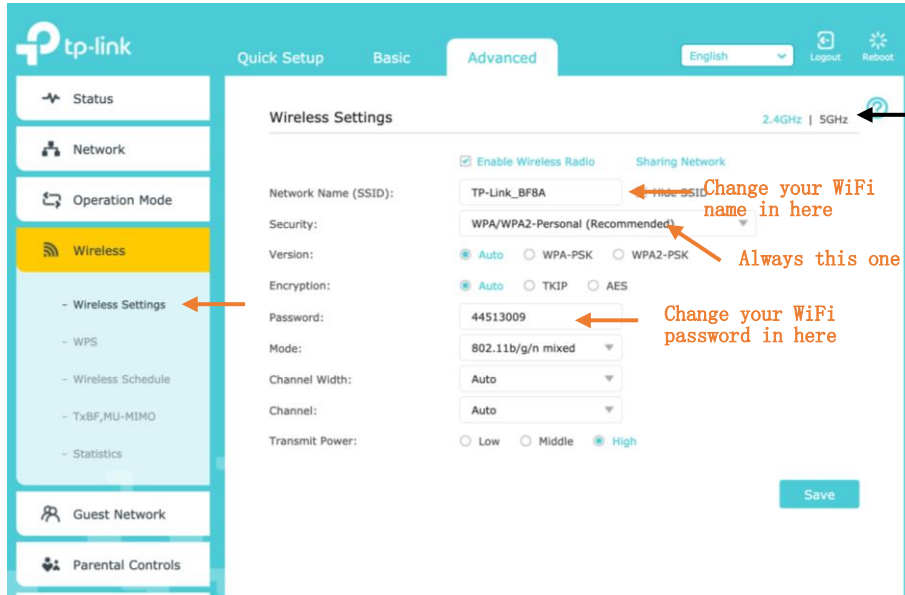

The image shows the TP-Link C60 router's web interface, specifically the 'Advanced' tab under 'Wireless Settings'. The left sidebar shows a navigation menu with 'Wireless' selected. The main content area has a 'Wireless Settings' header with a toggle for '2.4GHz' and '5GHz'. Below this, there are fields for 'Network Name (SSID)', 'Security', 'Version', 'Encryption', 'Password', 'Mode', 'Channel Width', 'Channel', and 'Transmit Power'. A 'Save' button is at the bottom right. Handwritten orange arrows point to the SSID, Security, Password, and the 5GHz toggle, with corresponding text instructions.

Wireless Settings 2.4GHz | 5GHz

☒ Enable Wireless Radio [Sharing Network](#)

Network Name (SSID): TP-Link_BF8A *Change your WiFi name in here*

Security: WPA/WPA2-Personal (Recommended) *Always this one*

Version: ☒ Auto ☐ WPA-PSK ☐ WPA2-PSK

Encryption: ☒ Auto ☐ TKIP ☐ AES

Password: 44513009 *Change your WiFi password in here*

Mode: 802.11b/g/n mixed

Channel Width: Auto

Channel: Auto

Transmit Power: ☐ Low ☐ Middle ☒ High

[Save](#)

You can change your 5GHz WiFi in here. Things are same with 2.4GHz page

***Note:** Because C60 is a dual band router, so it has 2 bands 2.4GHz and 5GHz. The settings in 2.4GHz and 5GHz are same.

***Careful:** Once you change your WiFi name or password, your device needs to reconnect with WiFi.