TP-Link AC1200 VR400 Setup Guide Normal




Contents

1 Reset Router	.:3
2 Connect Router	.3
3 Setup Router	
4 Login configuration page	
5 Optional: Change your Wi-Fi name and password/PIN	


1 Reset Router

- 1. **Connect** the router to power supply and **turn on** the router.
- 2. **Press** and **hold** the reset button on the back of the router for more than 10 seconds to reset the router to its factory default settings.

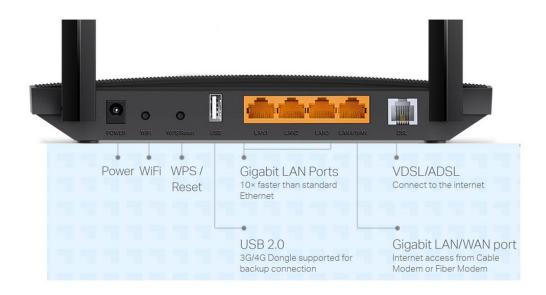

2 Connect Router


1. Connect the WAN port to the LAN 1/UNID1 port of the Fiber Box (i.e., NBN box) via the Ethernet cable.

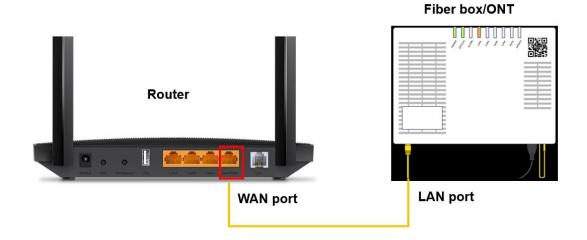

3 Setup Router

There are two methods to connect with your router.

1. Option one - Ethernet cable connection: Connect the laptop/PC to any of LAN ports (1 – 4 of router) via Ethernet cable.

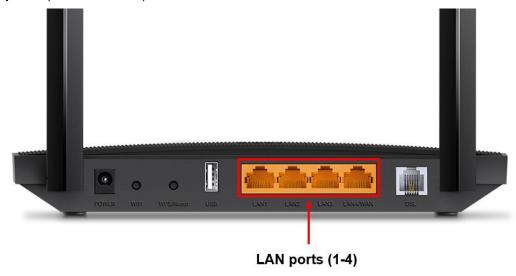

2. Option two - Wi-Fi Connection: Connect your **device** (laptop, iPad, or spare phone) to the Wi-Fi.

*How to check the Wi-Fi detail: Use SSID and Wireless password on **back of the router**.




4 Login configuration page

1. Input **192.168.1.1** in the address bar of the browser to visit the router's **configuration page**.

Username: Admin


Password: Occom_1234

2. Once login, on the sidebar, click "Advance". Click "Operation Mode". Select the "Wireless Router Mode", then click "Save".

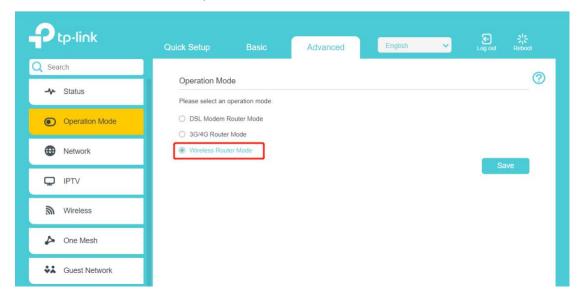


It may take some times to save the operation mode as Wireless Router.

3. After it has been changed to Wireless Router, please select "Internet" option on the left menu under "Basic" page, and change "Connection Type" to "PPPoE".

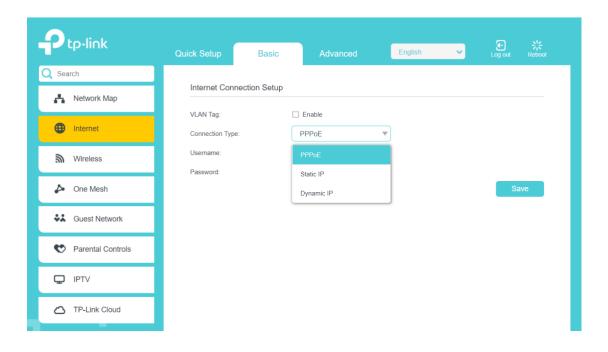

4. Enter the PPPoE account and PPPoE password, then click "**Save**".

*Note: PPPoE username and password can be found in the activation email, if you cannot find yours, please do not hesitate to contact our friendly support team.

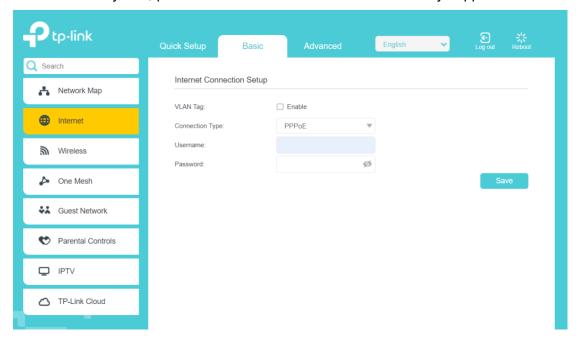


5. After a while, the third on the left light of your router is solid green which means you can access the Internet now.



5 Optional: Change your Wi-Fi name and password/PIN

1. To change your Wi-Fi name and password, select "**Wireless**" option on the left menu under "**Basic**". Click "**Save**" bottom after changing.

*Note: Because TP-Link AC1200 VR400 is a dual band router, so it has 2 bands 2.4GHz and 5GHz. The settings in 2.4GHz and 5GHz are same.

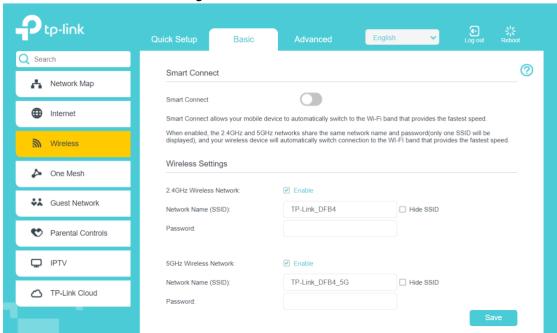

*Careful: Once you change your Wi-Fi name or password, your device needs to reconnect with Wi-Fi.