

# **Deco M1300 installation instruction**

**OCCOM**

05/03/2020

1. Download and launch the Deco app on your smart phone.



**Deco**

2. Create a TP-Link ID

< Create a TP-Link ID Australia

Email address



This will be your TP-Link ID.

Password



Confirm Password




I have fully read and accepted the [Privacy Policy](#) and [Terms of Use](#).



I want to receive updates, usage tips, marketing promotions, and product-related information via email.

3. Please make sure Bluetooth is enabled on your smart phone when you are setting Deco.

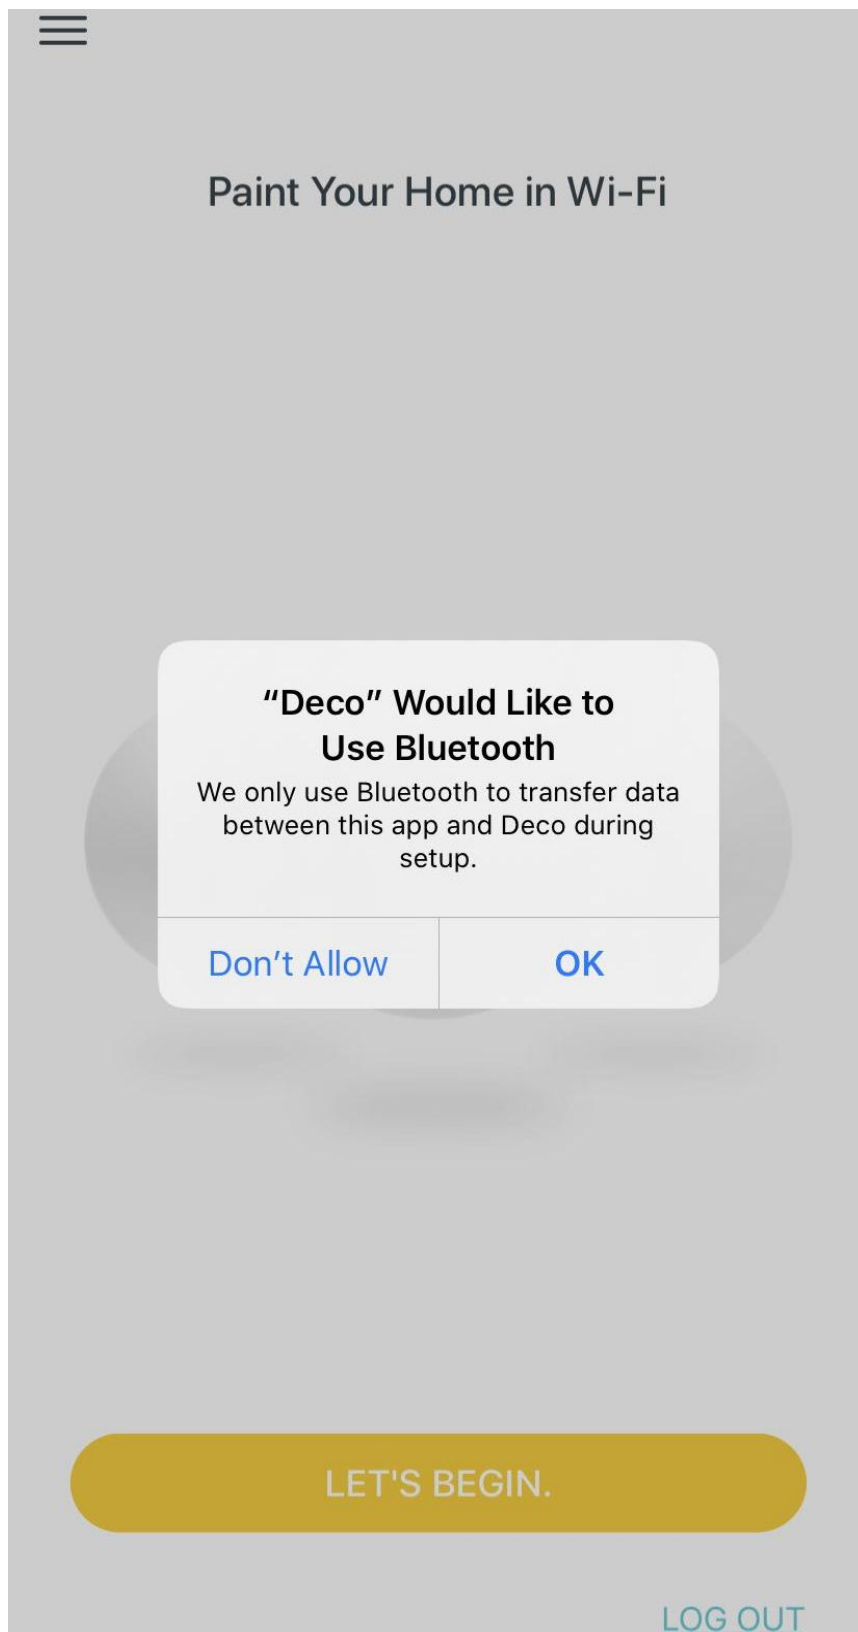

4. Please select M5/M1300



X60



M9 Plus



X20



P9



P7



M5/M1300




M4/E4/W2400/M3/  
E3/AC1200



S4

5. Pick one Deco with power adapter and ethernet cable.

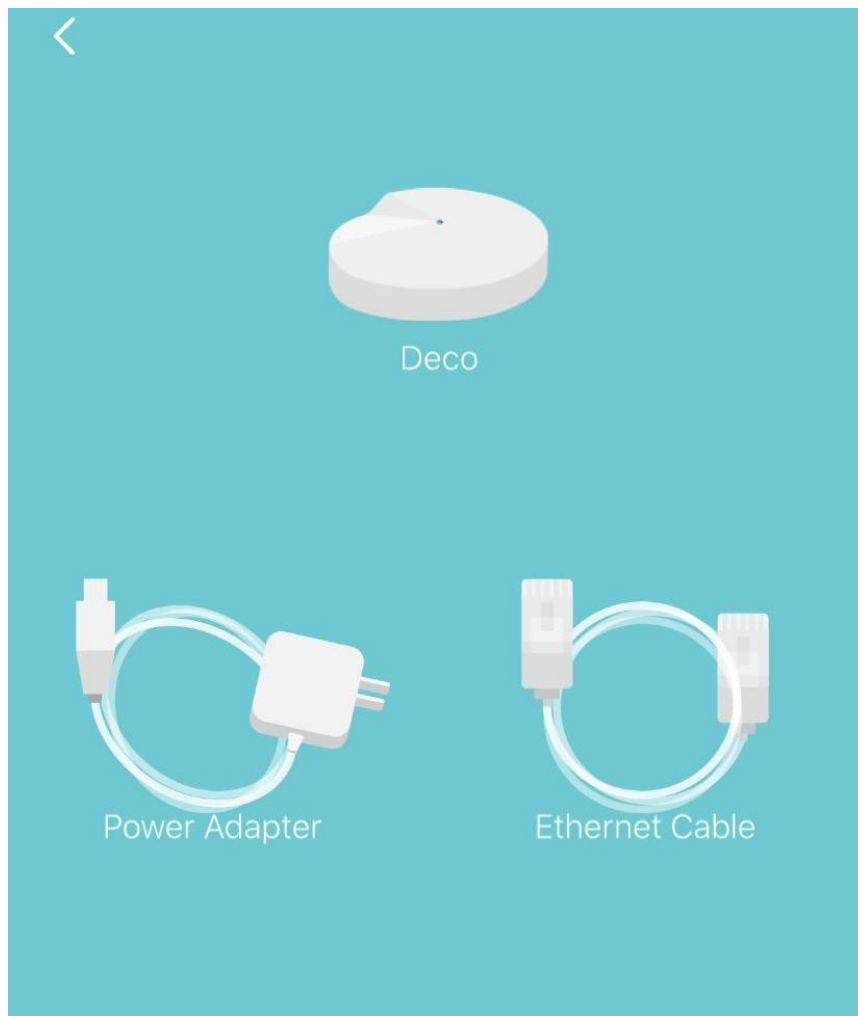


### What you'll need

Find these in your Deco packaging. You'll only need one Deco for now. More can be set up later.

NEXT

6. Connect the Ethernet cable from any port on the back of Deco, to the provisioned port on your Optical Network Terminal (normally it's LAN1 or UNI-D1).

You may find which is “provisioned port” on your Optical Network Terminal by checking our Service Activation Notice email.

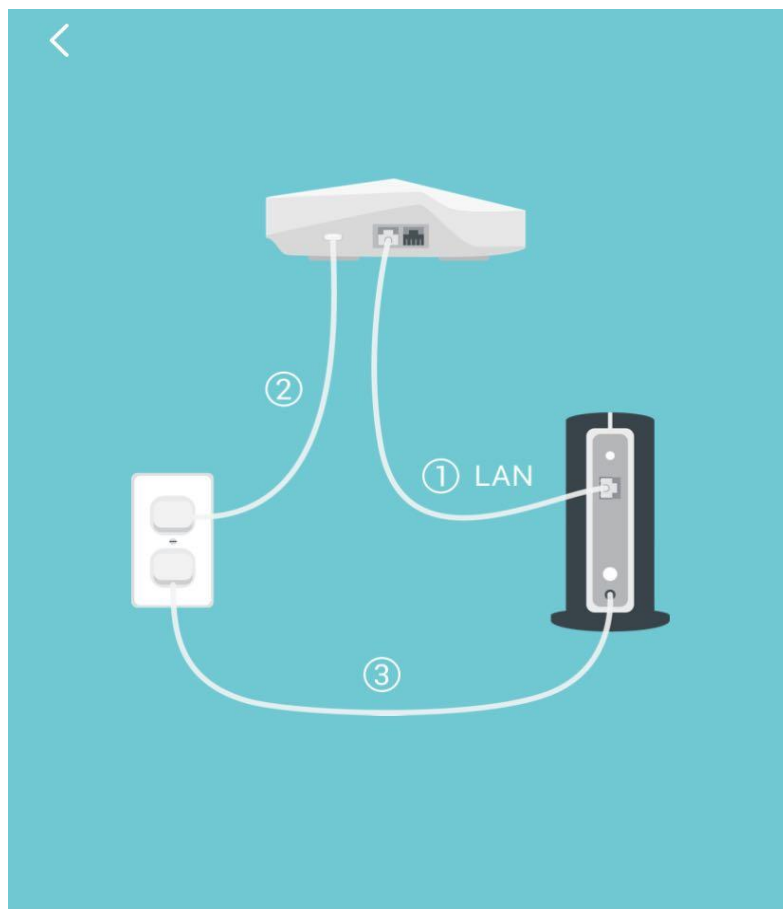


### Plug in your devices

Connect your modem's LAN port to either Ethernet port on Deco and power them both on.

NEXT

If fibre box is not installed inside your unit, apartment or communication cabinet, it may be jumpered onto one of wall socket inside you house. Try connecting Deco to any wall socket first, you may need to test around and identify the correct port later.

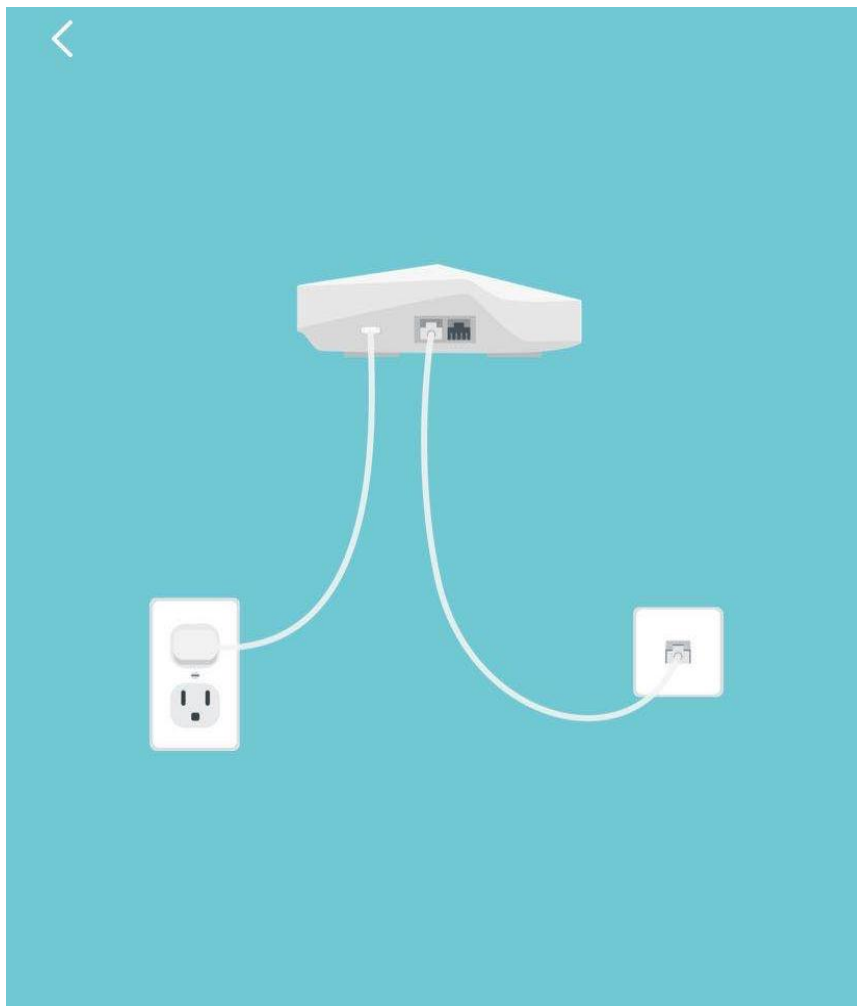


### Plug in your devices

Directly connect either Ethernet port on Deco to the Ethernet outlet, and power Deco on.

NEXT

7. Power on Deco and wait until the LED pulses blue, it is ready for setup.

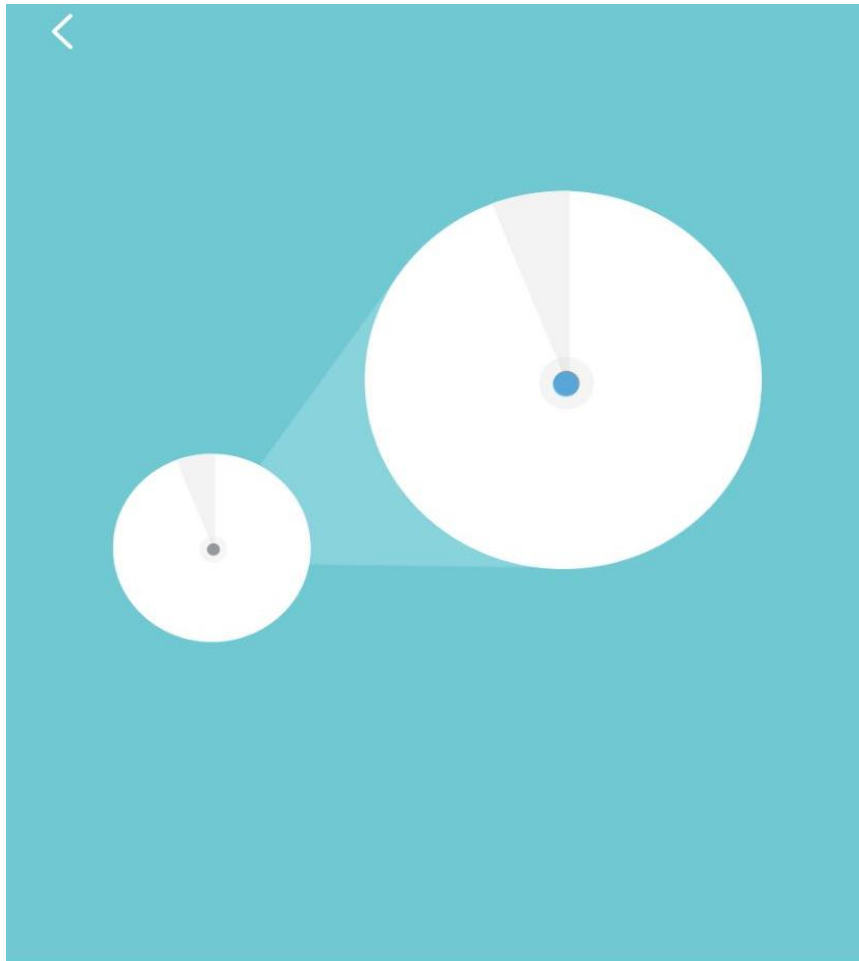


**Power on Deco and wait until the LED pulses blue**

- Solid Yellow: Deco is starting up, please wait.
- ↓
- Pulsing Blue: Deco is ready for setup.

**DECO'S LED IS PULSING BLUE**

[Why is my LED not pulsing blue?](#)

8. Select PPPOE as connection type, and then input the PPPOE username and password which are provided by OCCOM Service Activation Notice Email.

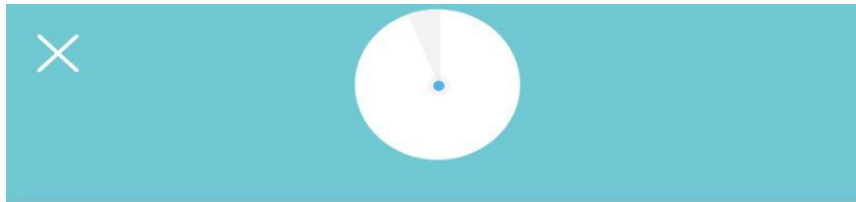

## Internet Connection

Enter the information provided by your ISP (internet service provider). If you are unsure, contact your ISP.

Connection Type

PPPoE >

Username

---

Password


---



NEXT

[VLAN Settings](#)

## 9. Create your Wi-Fi name and password



### Create your Wi-Fi Network

This will be the name and password you'll use to access your network. Your password must be at least 8 characters.


Network Name

Password


It is recommended to set a password using a combination of letters, numbers and symbols.

NEXT


## 10. Power on another Deco and select 'ADD ANOTHER DECO'.

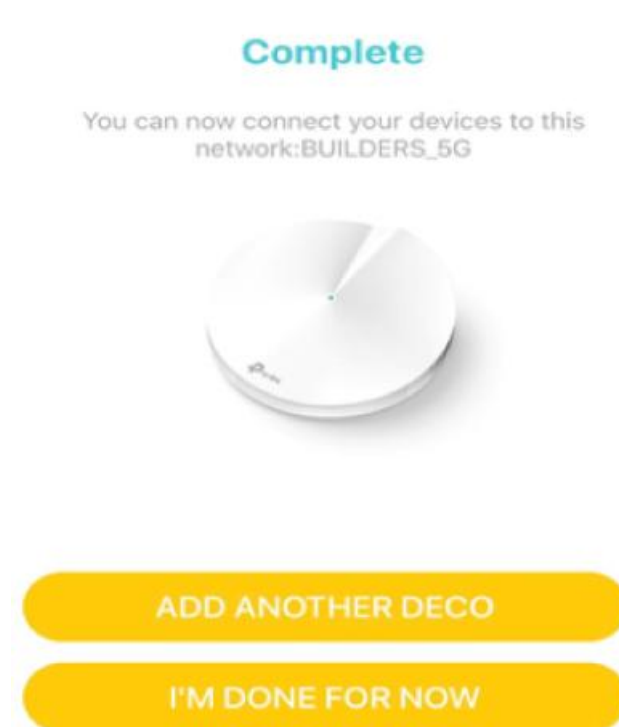

11. The system will automatically identify and look for the new Deco

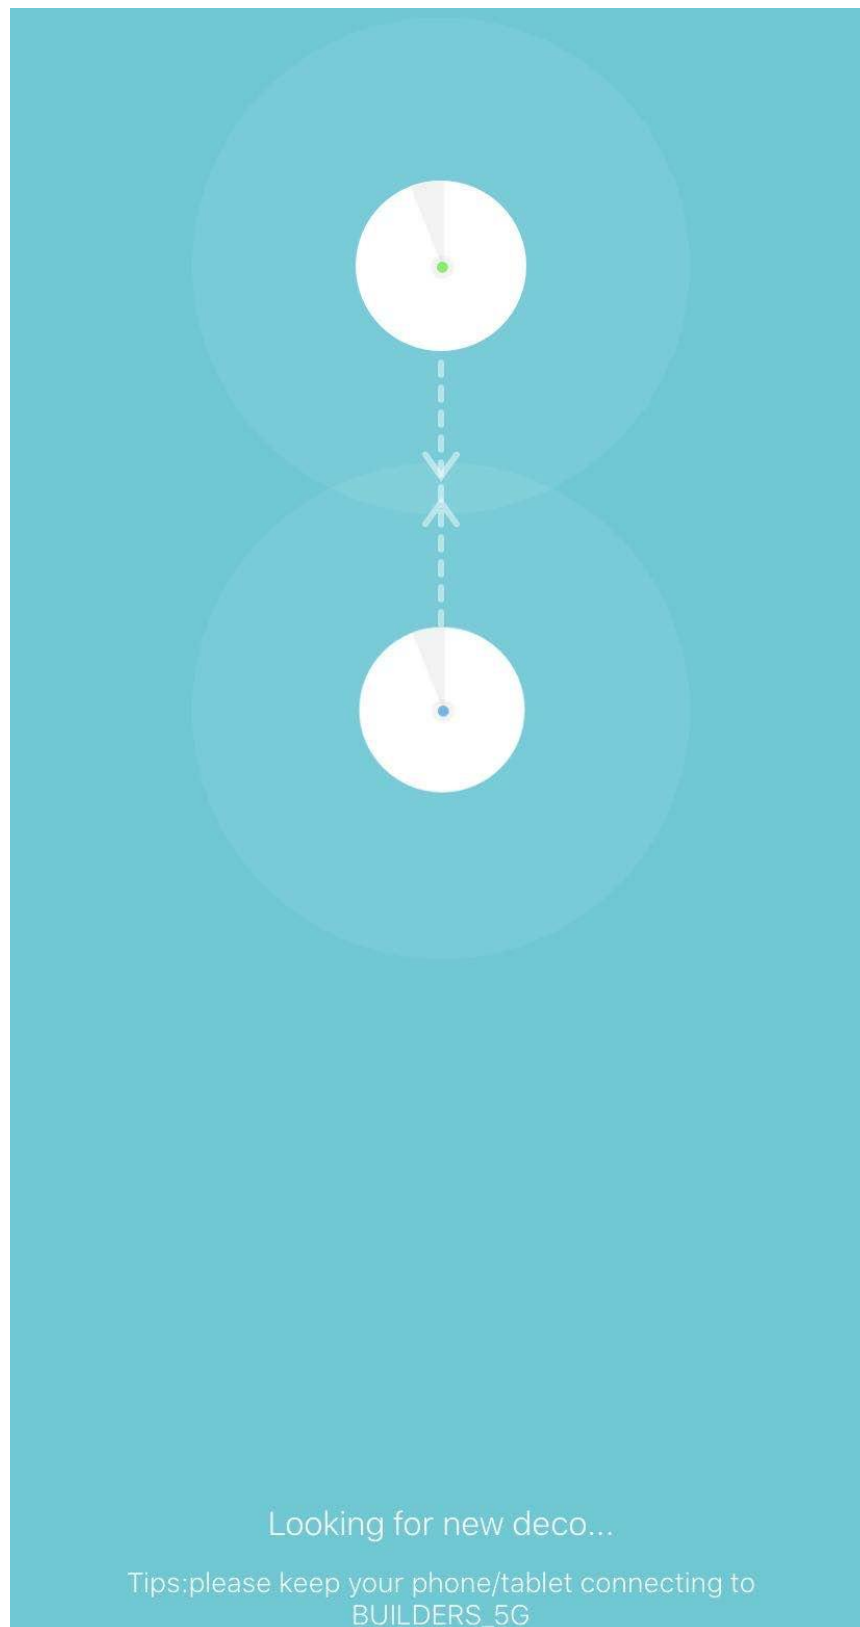

12. You can put the Deco where you prefer. You can also choose a suitable spot to place Decos according to the suggestions given by the

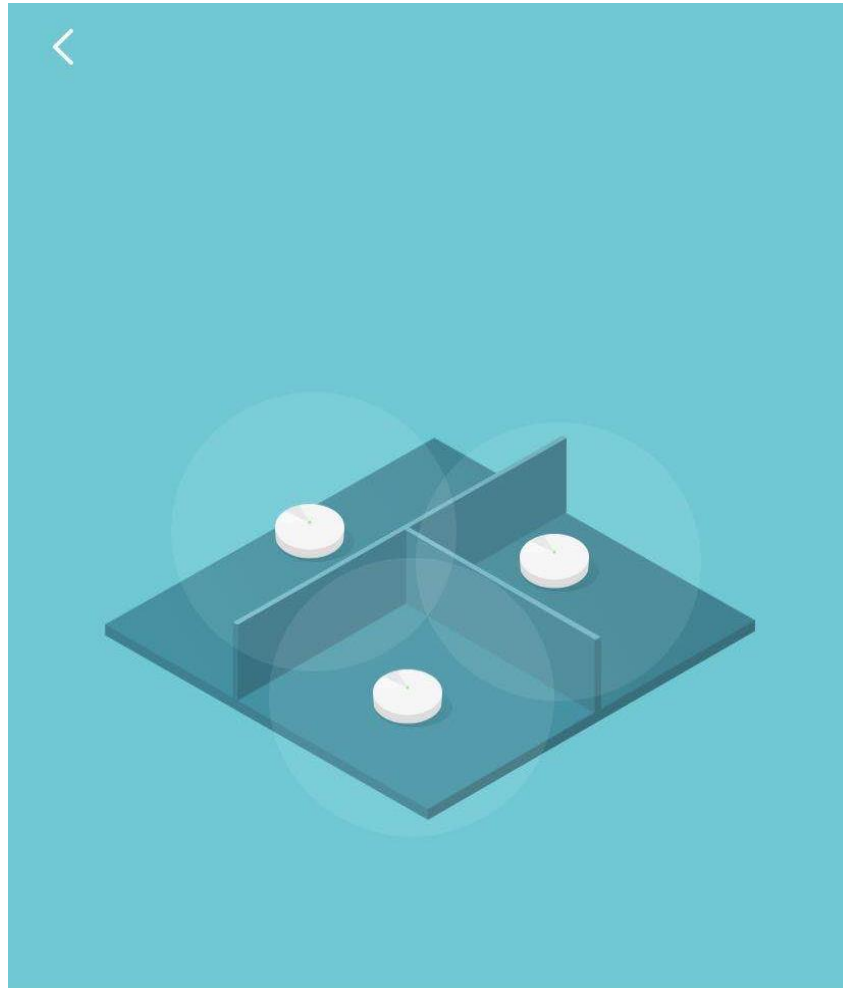

### Find a suitable spot

Select the layout that looks like your home.  
We'll tell you where to place Decos.


▼ 1 floor ▲

NEXT

[See Placement Guide](#)

system.

13. It is done. On the home page, you can view your network status.

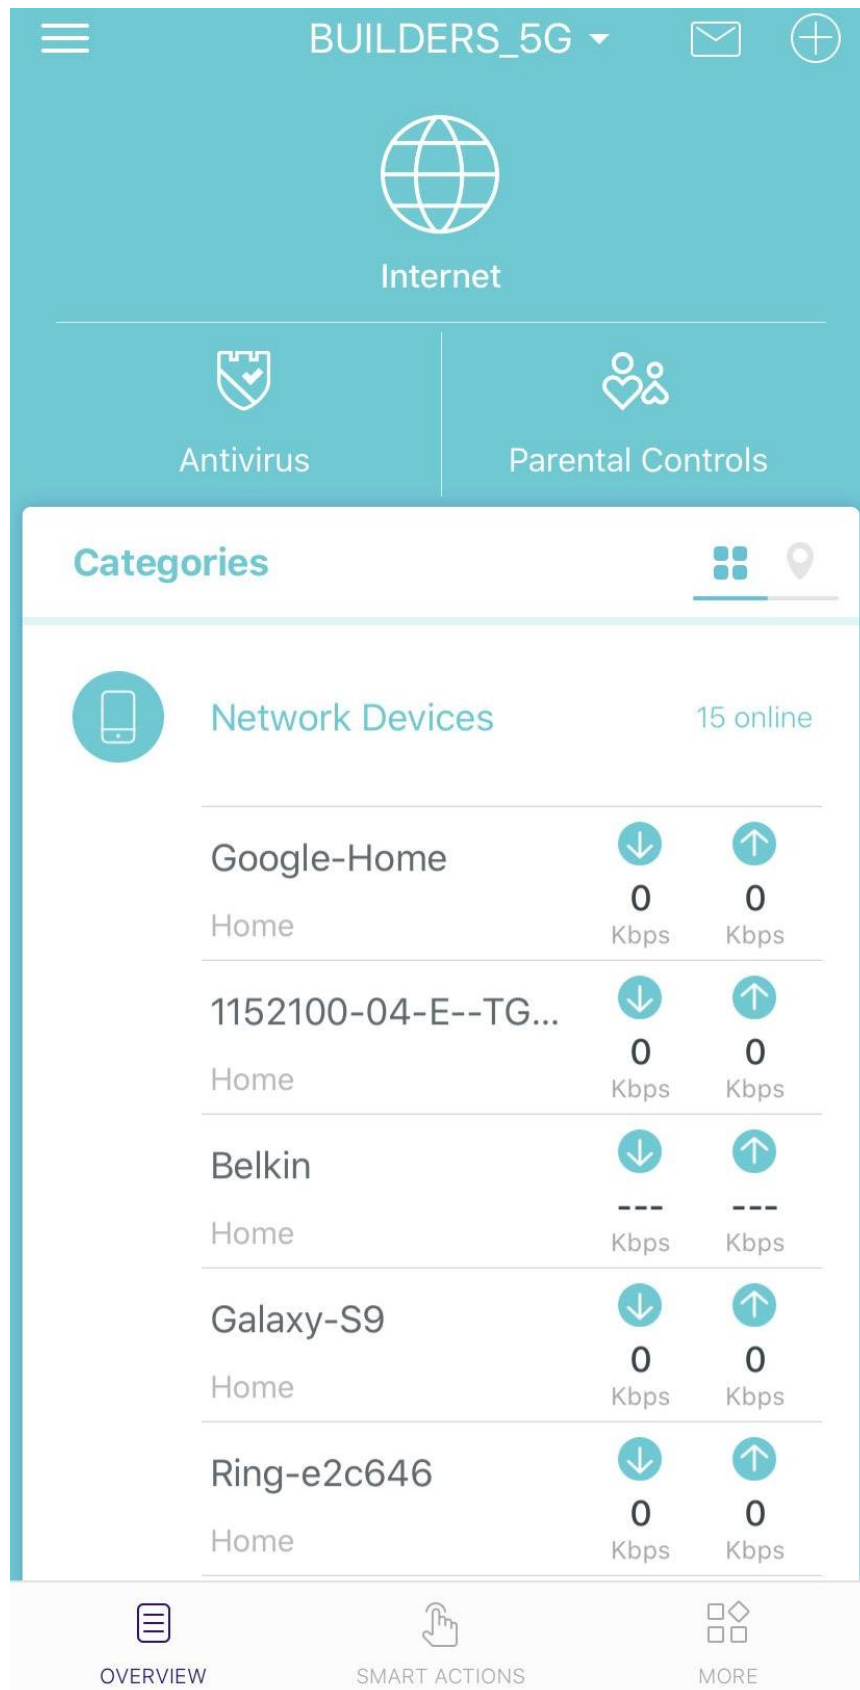

14. You can click 'MORE' button to access the setting page to manage your network and Decos.

